

How-To-Do

Import Variables from Motionworks IEC to Movicon 11.6


Content

1	Define Variables in Motion Works	2
1.1	Step 1.....	2
1.2	Step 2.....	2
2	Add and configure MPiec PLCi driver in Movicon	3
2.1	Step 1.....	3
2.2	Step 2.....	4
2.3	Step 3.....	5
2.4	Step 4.....	6
2.5	Step 5.....	7
3	Import Variables from Motionworks.....	8
3.1	Step 1.....	8
3.2	Step 2.....	9
3.3	Step 3.....	10
3.4	Step 4.....	12
3.5	Step 5.....	13

1 Define Variables in Motion Works

1.1 Step 1

Define all the variables you want to visualize, control or monitor in the Software Motionworks IEC

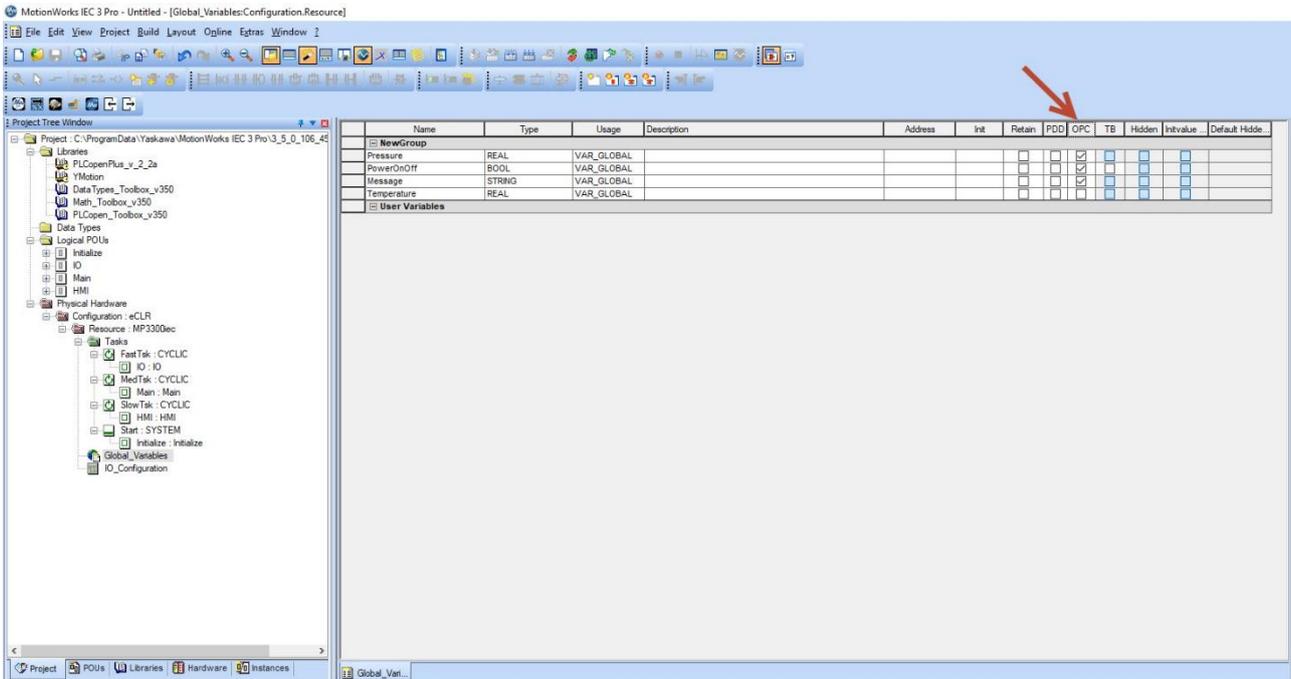

1.2 Step 2


To use the “easy” Import function of the PLCi driver in Movicon mark all the variables that should be imported as “may be used by OPC”

Name	Type	Usage	Description	Address	Init	Retain	PDD	OPC	TB	Hidden	Initvalue ...	Default Hidde...
NewGroup												
Pressure	REAL	VAR_GLOBAL				<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
PowerOnOff	BOOL	VAR_GLOBAL				<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Message	STRING	VAR_GLOBAL				<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Temperature	REAL	VAR_GLOBAL				<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
User Variables												

2 Add and configure MPiec PLCi driver in Movicon


2.1 Step 1

Choose the Yaskawa MPiec PLCi driver from the Comm I/O driver list.

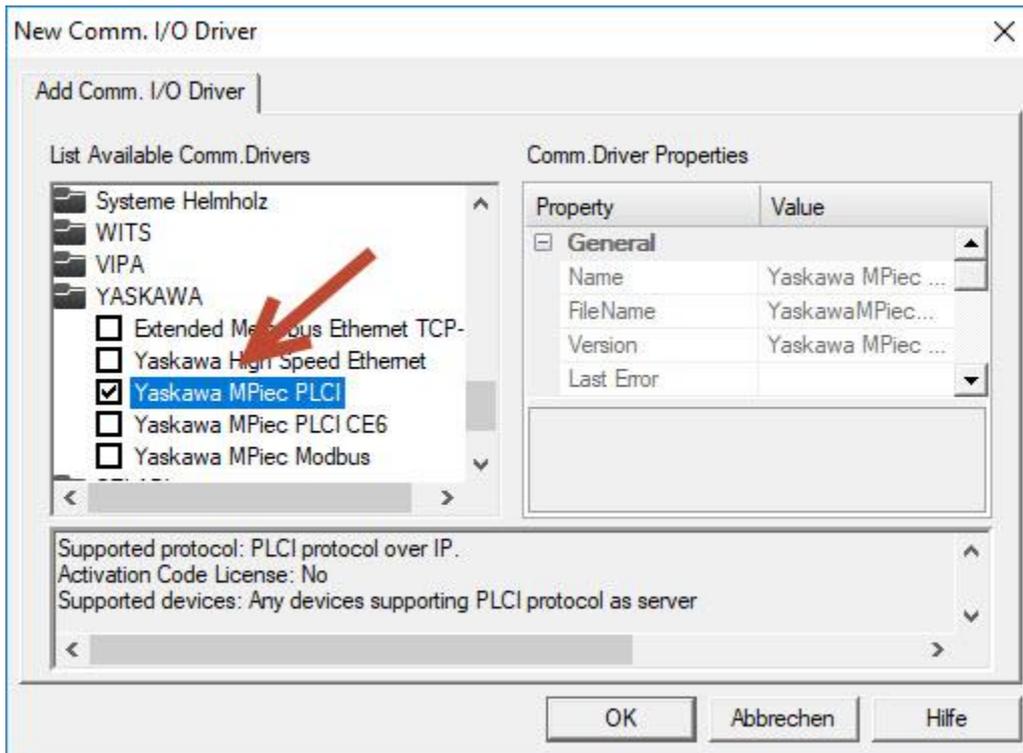


2.2 Step 2

Right click or double click on the driver to open the settings of the driver.

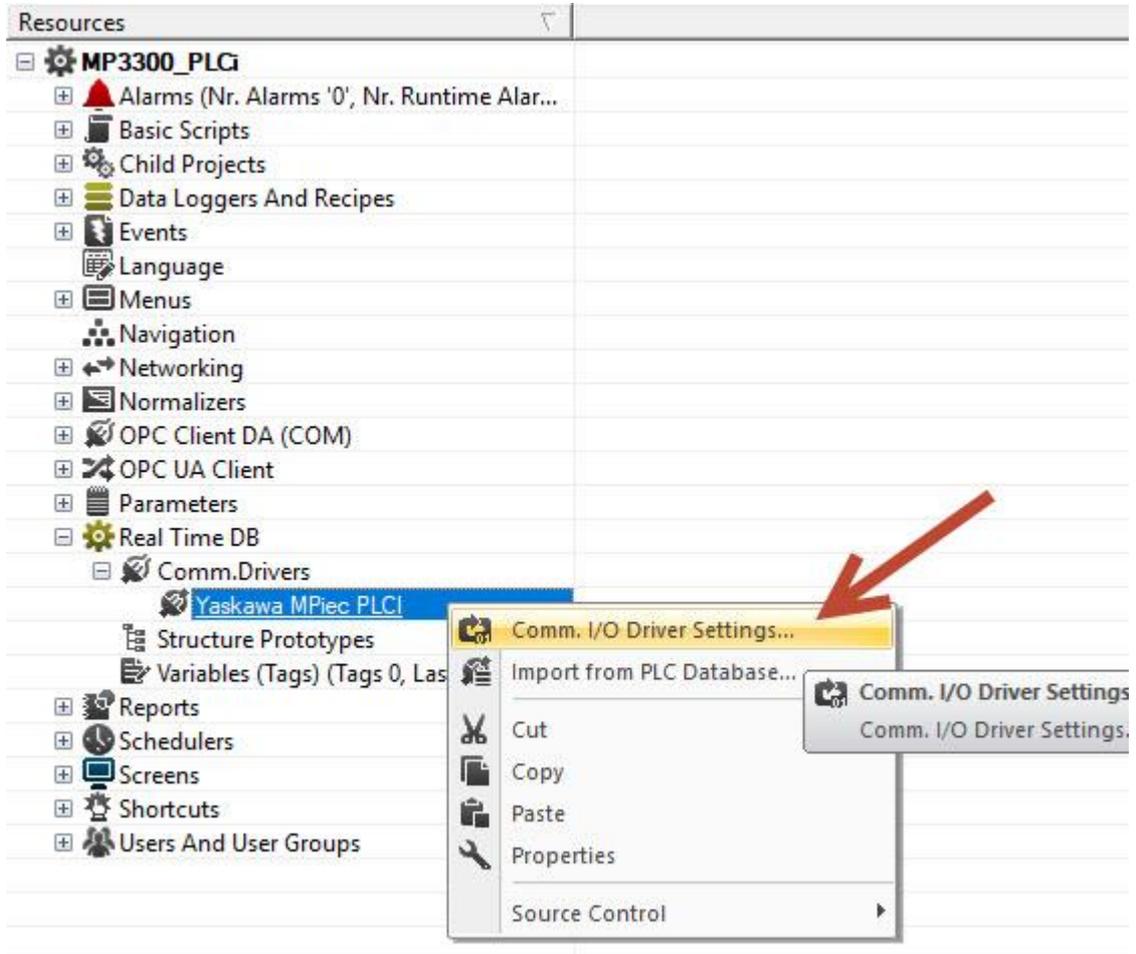


2.3 Step 3

Choose the Tab **Stations** and press “Add”

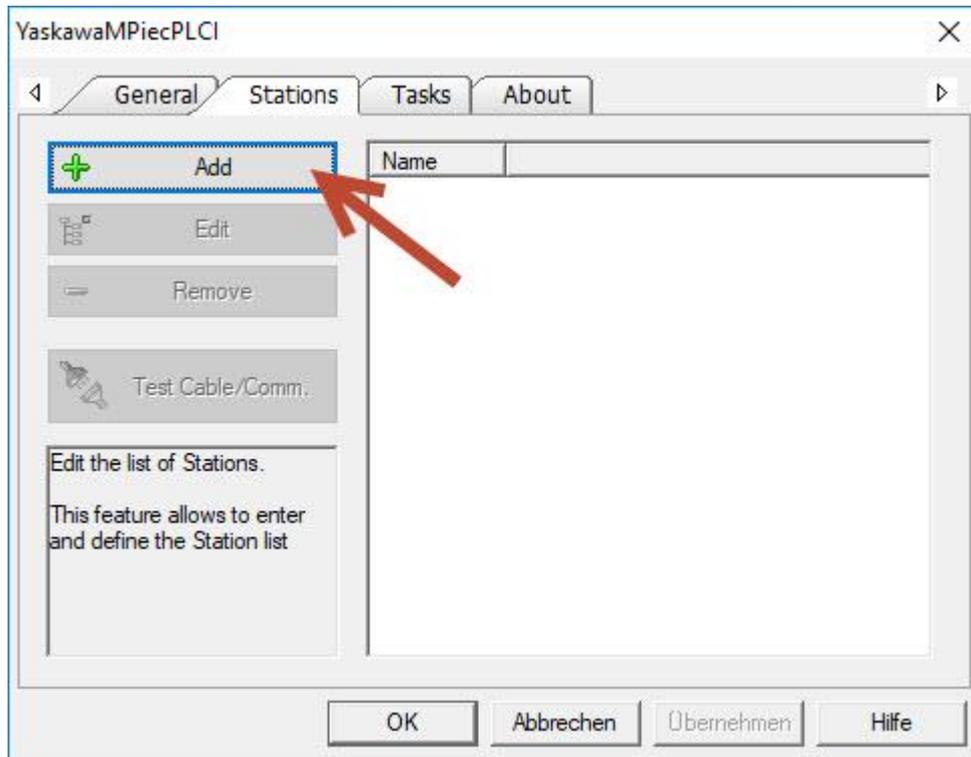



2.4 Step 4

Type the IP address of your MP Controller into the field „Server Address“, optional you can define a name for your Controller in the field “Station Name”, otherwise it is called “Default Station”:

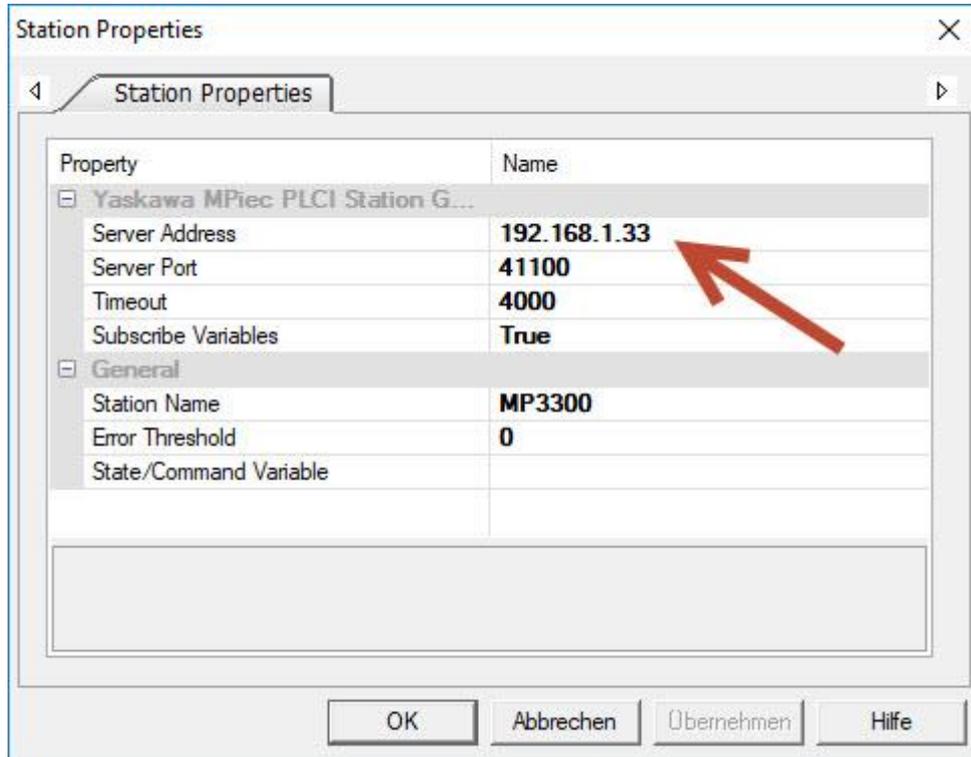

2.5 Step 5


By pressing the “Test Cable/Comm” button, Movicon will check if the physically connection to the MP controller is possible or not

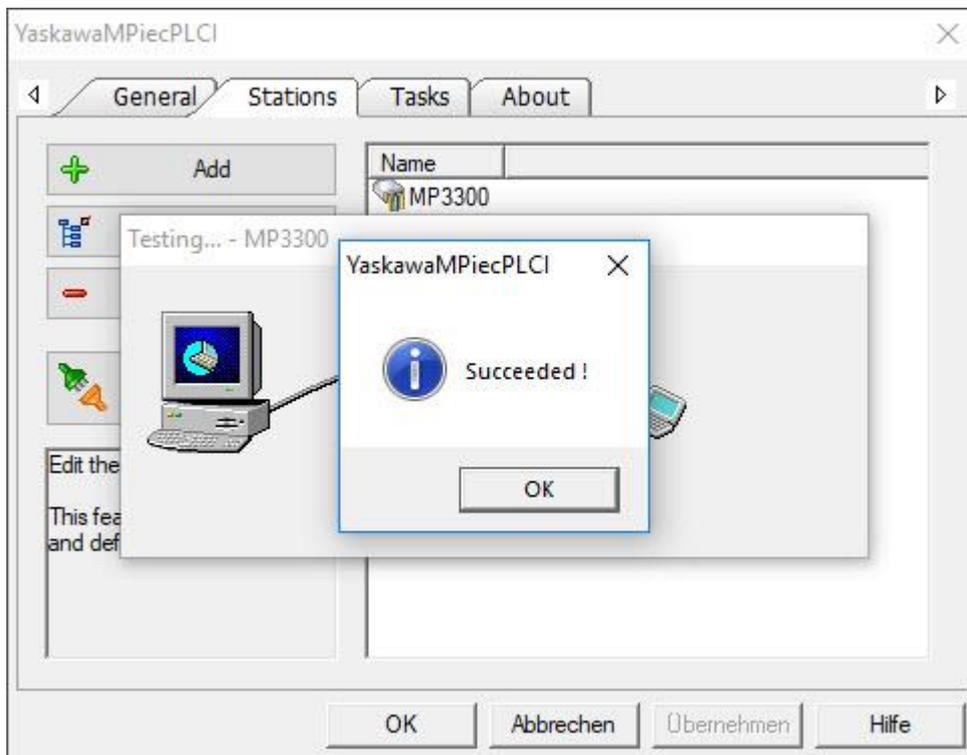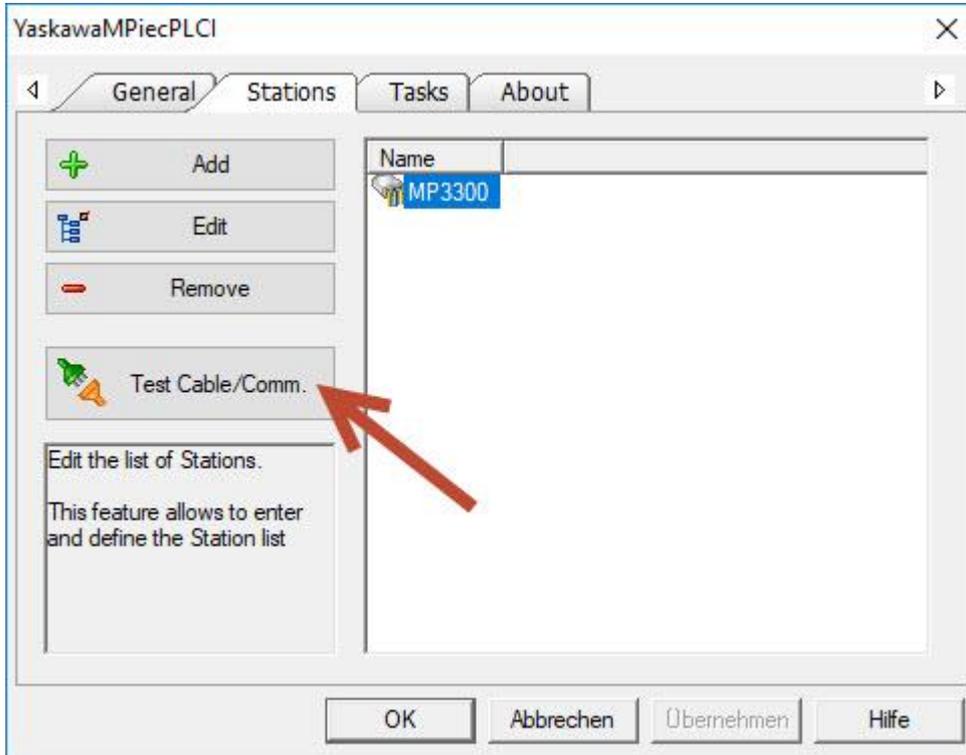

3 Import Variables from Motionworks


3.1 Step 1

Right click on the Yaskawa MPiec PLCi

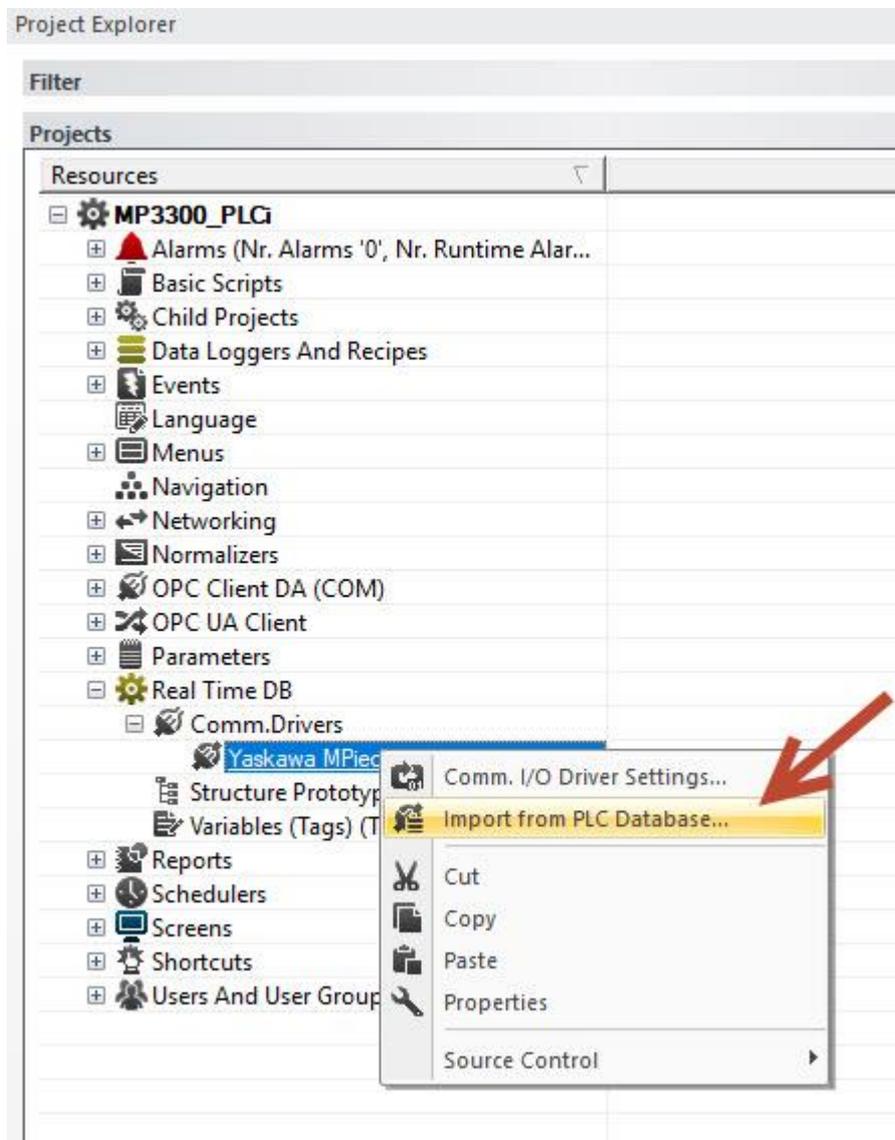


3.3 Step 3

Option 1: Get the Variables directly from the connected PLC

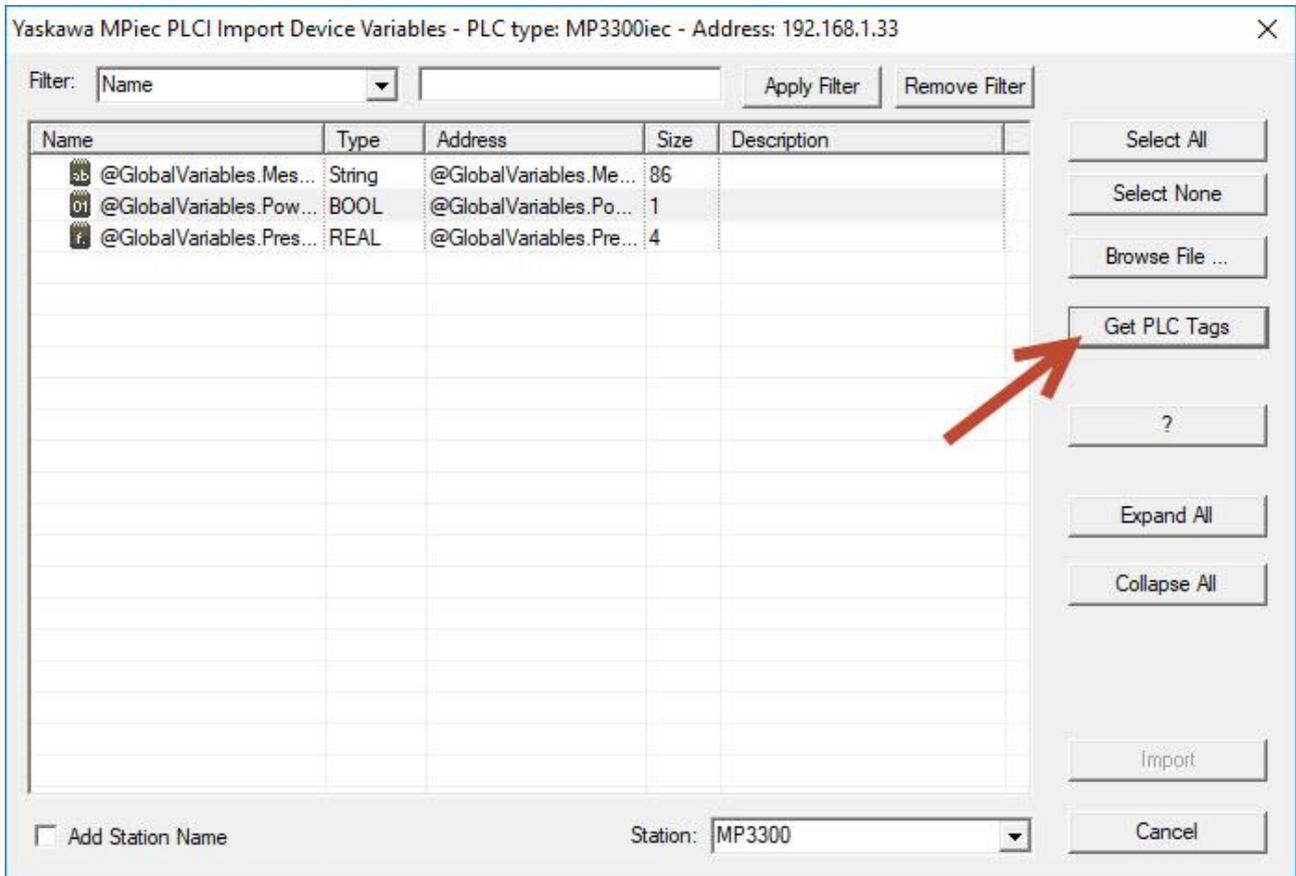

Option 2: Get the Variables from the project file

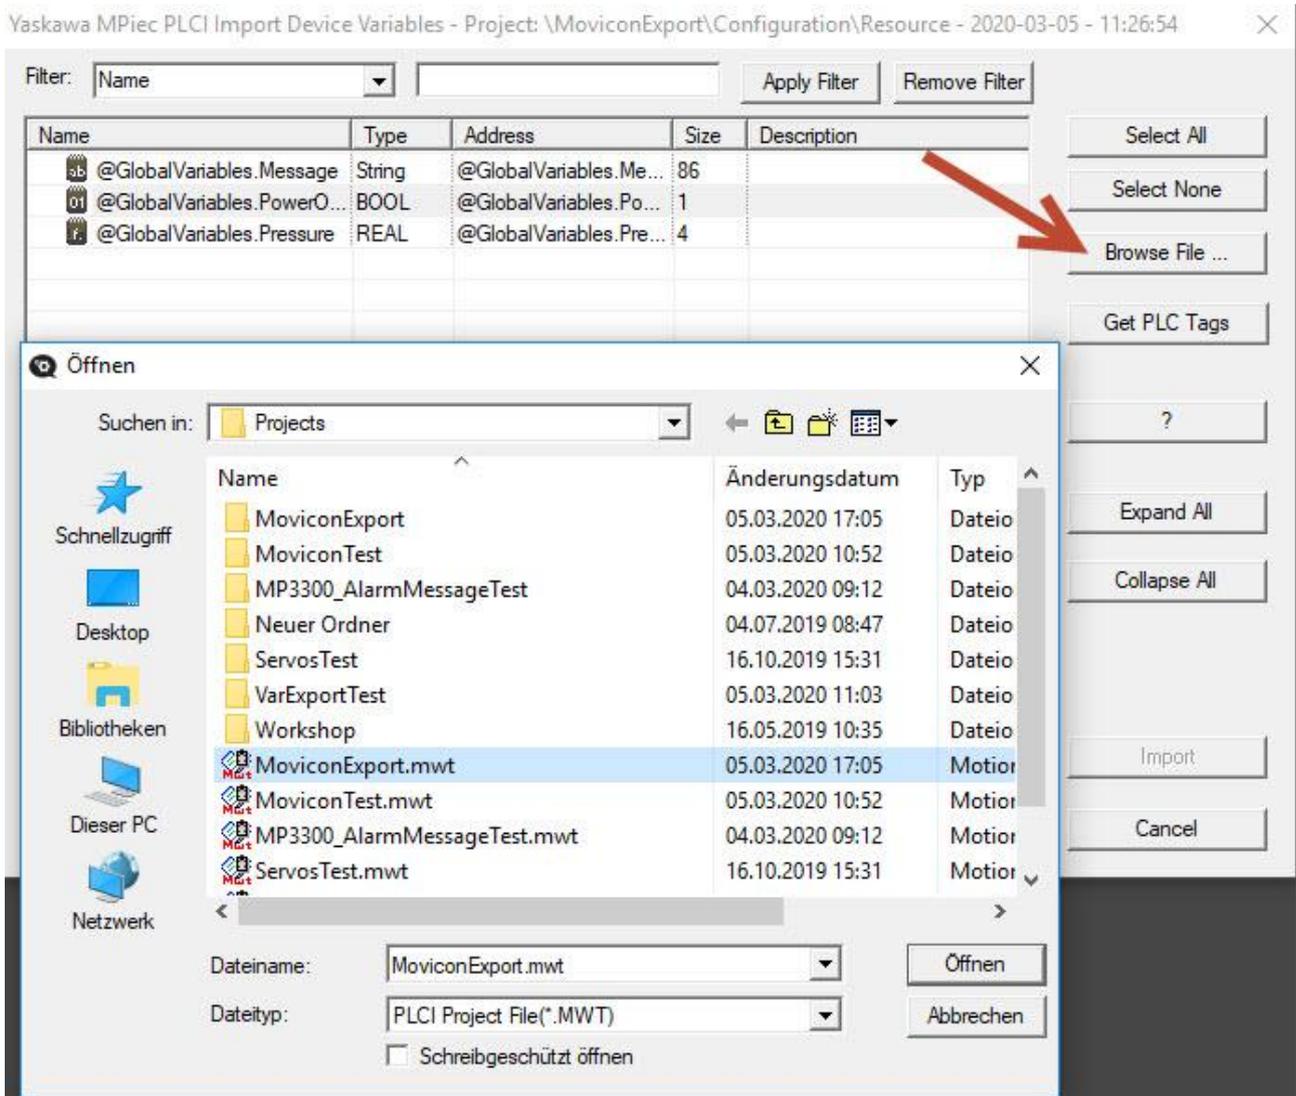

3.4 Step 4

Select all or only the needed Variables and press Import


Yaskawa MPiec PLCI Import Device Variables - Project: \MoviconExport\Configuration\Resource - 2020-03-05 - 11:26:54

Filter: Name Apply Filter Remove Filter

Name	Type	Address	Size	Description
 @GlobalVariables.Message	String	@GlobalVariables.Me...	86	
 @GlobalVariables.PowerO...	BOOL	@GlobalVariables.Po...	1	
 @GlobalVariables.Pressure	REAL	@GlobalVariables.Pre...	4	

Buttons: Select All, Select None, Browse File ..., Get PLC Tags, ?, Expand All, Collapse All, Import, Cancel

Add Station Name Station: MP3300

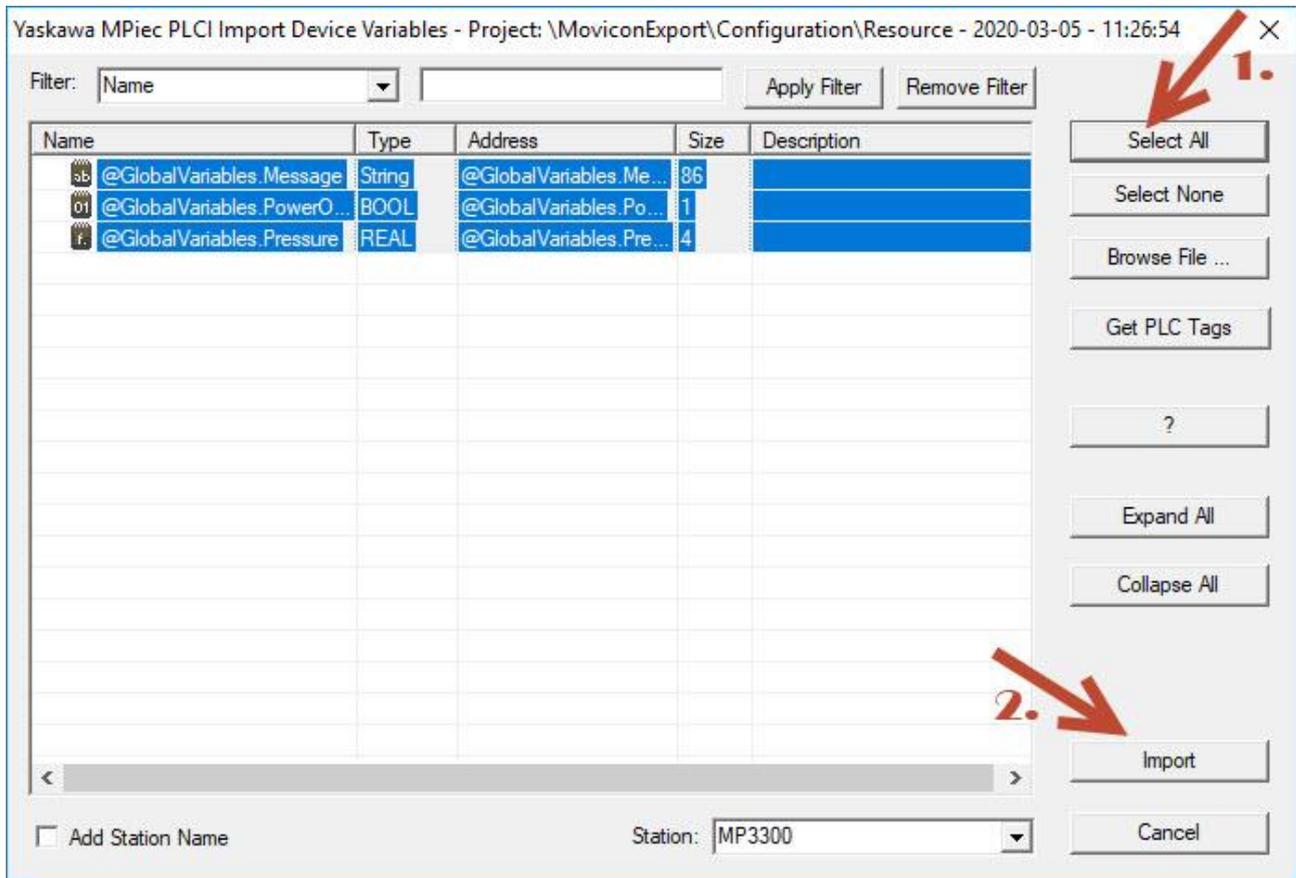

3.5 Step 5

Done

Resources	Type	Area Type	Address	Desc
[-] MP3300_PLC				
+ Alarms (Nr. Alarms '0', Nr. Runtime Alar...				
+ Basic Scripts				
+ Child Projects				
+ Data Loggers And Recipes				
+ Events				
+ Language				
+ Menus				
+ Navigation				
+ Networking				
+ Normalizers				
+ OPC Client DA (COM)				
+ OPC UA Client				
+ Parameters				
[-] Real Time DB				
[-] Comm.Drivers				
Yaskawa MPiec PLCI				
Structure Prototypes				
[-] Variables (Tags) (Tags 3, Last Peek I/O...				
+ GlobalVariables_Message	String (z...	Not Shared	0	
+ GlobalVariables_PowerOnOff	Bit	Not Shared	0.0	
+ GlobalVariables_Pressure	Float (32...	Not Shared	0	
+ Reports				
+ Schedulers				
[-] Screens				
+ Main				
+ Shortcuts				
+ Users And User Groups				